

# IMPORTANT!

## Wrap Removal Recommendation


When cutting the wrap, make only one clean cut along the entire length of the module without leaving shards of plastic at the cut.

*NOTE: 7½–8 foot diameter modules can be cut directly opposite the outer wrap end.*

1. An RFID generation II tag (A) is placed near the inner wrap end.

2. Cut wrap at position (B), opposite the RFID tag (A) to prevent cutting through the inner or outer wrap ends (C).

(A) RFID Tag (B) Cut Position (C) Inner and Outer Wrap Overlap (NO CUT ZONE) (D) Module Tag

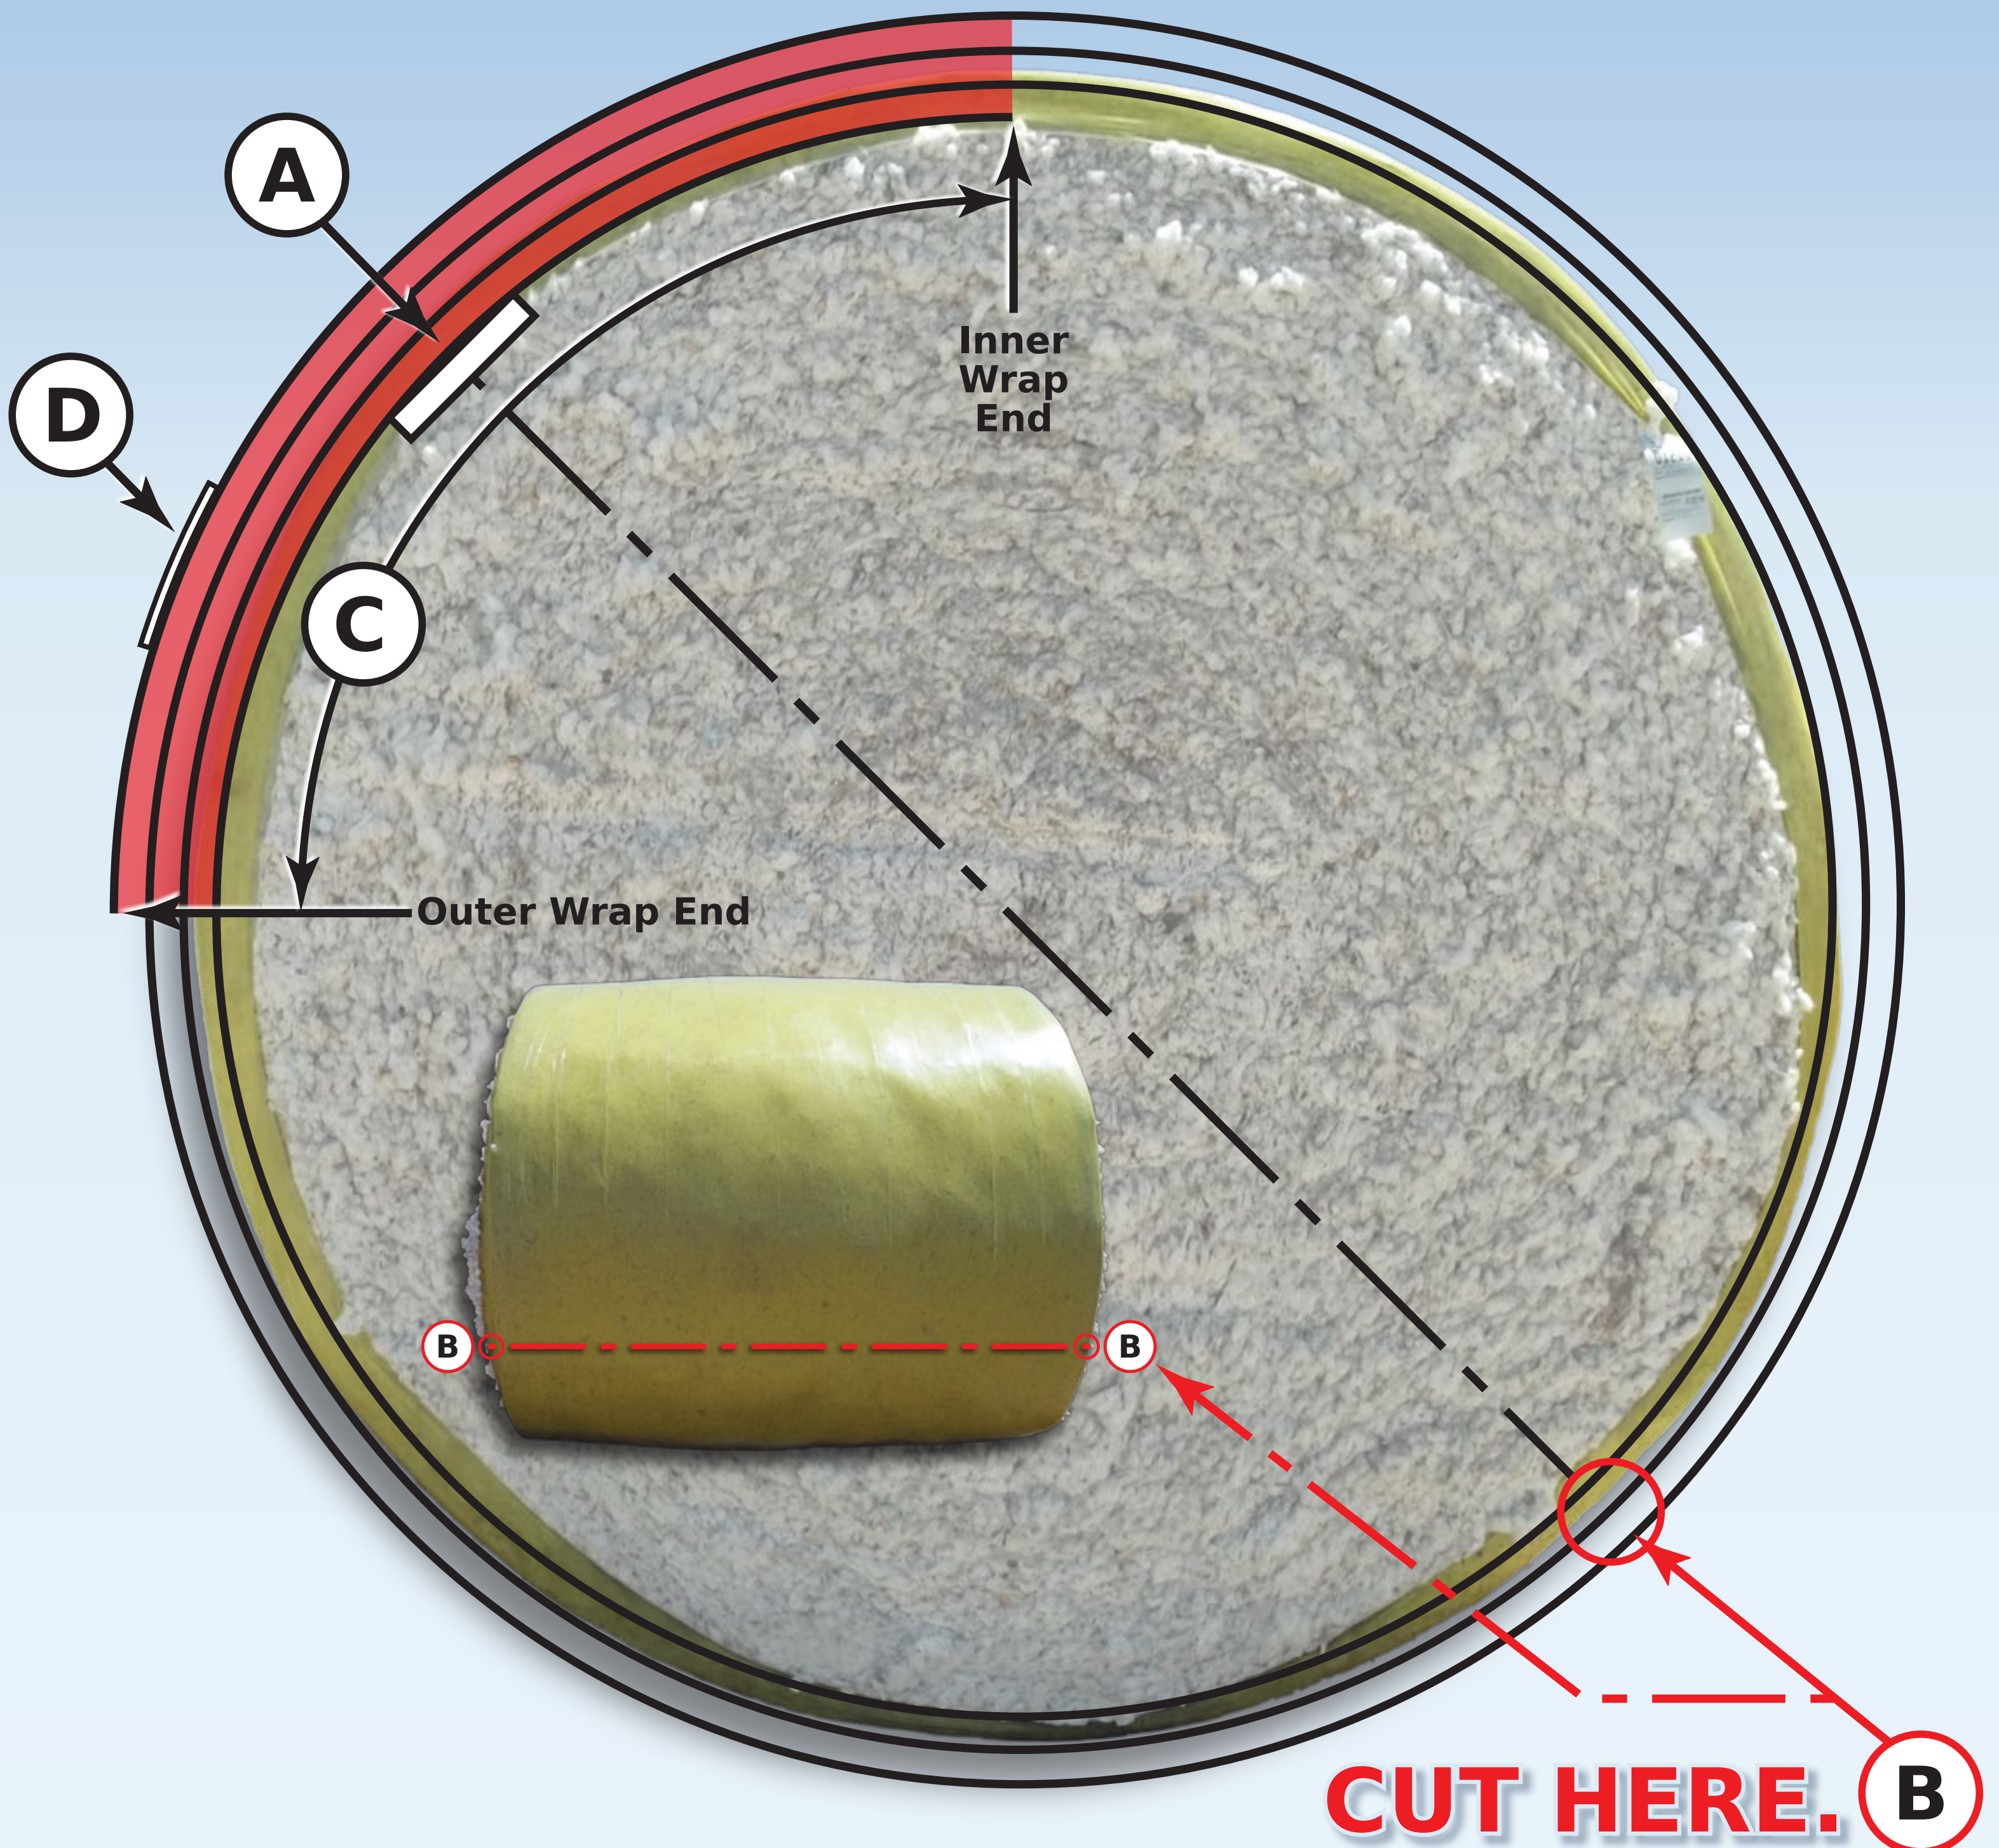

As referenced in John Deere's Round Cotton Module Ginning Recommendations